


Nanobox | Razzmatazz Quick Start Guide

GET SET UP


1. Insert the microSD card. The card must be in the slot for razzmatazz to load. The card is spring-loaded. Push to eject when needed, but leave it in for now.
2. Connect the Line Out to your mixer, speakers or headphones.
3. Connect an optional MIDI controller to the MIDI IN jack. TRS Type A and B are supported.
4. Connect the USB power cable.
5. Finger drum on the Pads Home screen or the MIDI controller and you are ready to make some beats!

INTRODUCING NANOBOX | RAZZMATAZZ

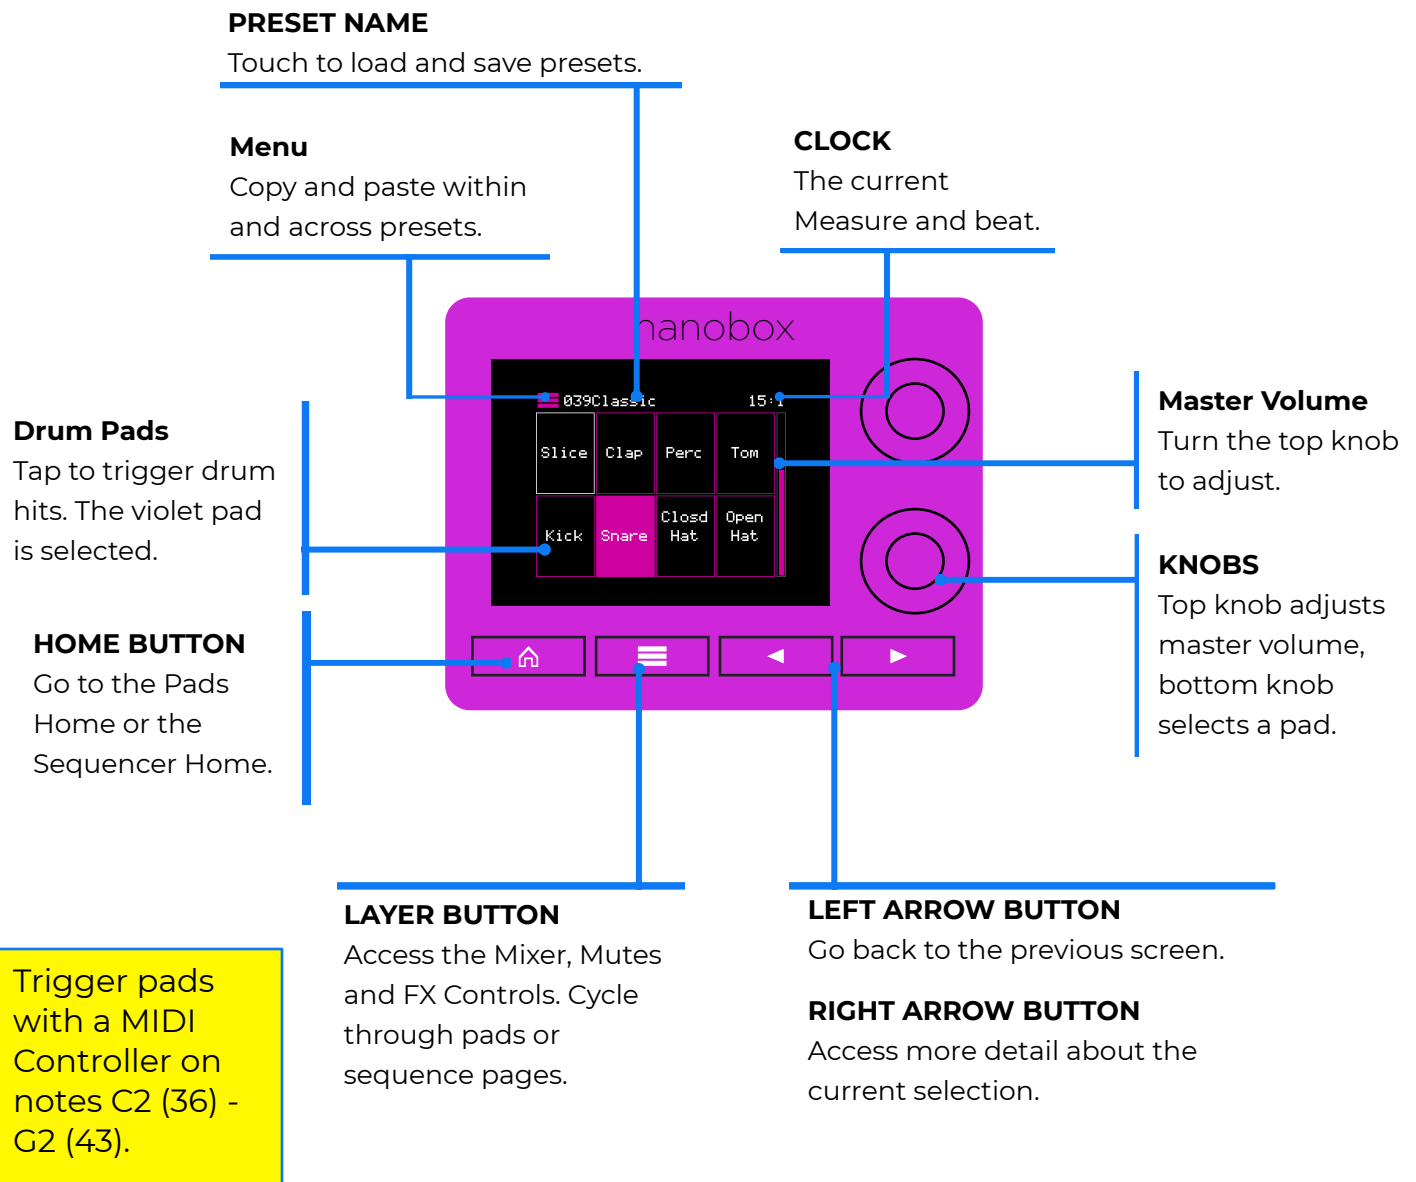

FEATURE MAP


Long hold Home to access the Teleporter Menu.

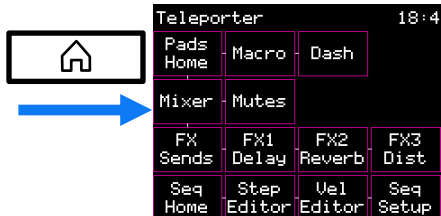

Touch options on the Teleporter to jump to a screen.


Pads Home

Finger drum and select a preset.

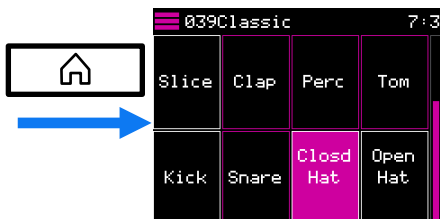


Macro Controls

Tune the pad settings.

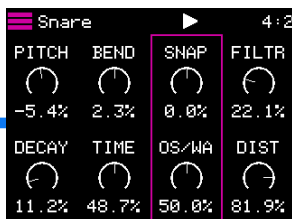

Pad Dashboard

Build a new pad. Record WAV files.

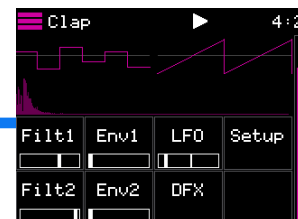


Mixer

Adjust level and pan.




Mute

Silence a pad.

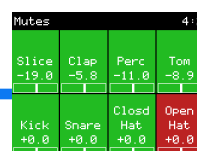


FX Screens

Control FX sends, and adjust FX parameters.

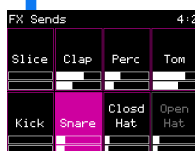


Sequencer

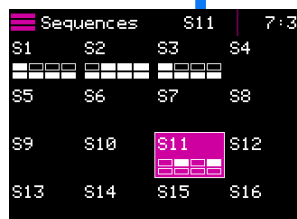


Sequencer Home

Select and activate a sequence.

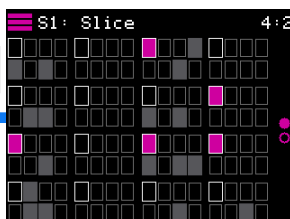


Step Editor

Edit a sequence.

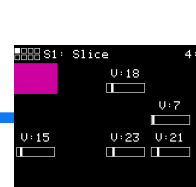

Advanced Sequence Controls


Edit event velocity, set step count and step length.

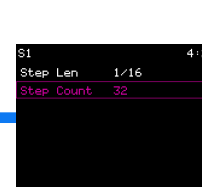

Transports

Play and record into the active sequence.

Long Hold

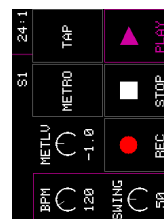

Touch the top right screen corner or long hold the Right Arrow button from anywhere to open the Transports screen.

TUNE PAD SETTINGS ON THE MACRO SCREEN

Pad Name/Model Picker
Touch to rename and select a pad model.

Menu
Copy and paste pads.

Focus Ring
Touch a column to move the focus. Turn the hardware knobs to adjust settings in the focus ring.

Pad Trigger
Touch to trigger the pad to hear your changes. Flashes when pad is triggered.

Macro Controls
Adjust settings specific to a pad's drum model.

Push the layer button to cycle through the pads in this preset.

PLAY SEQUENCES

Sequence Thumbnail
Filled rectangles indicate which pads are used.

Selected and Active
Touch to select a sequence. The violet sequence is selected. The white frame shows it is playing.

Selected Sequence
Confirm which sequence will play or record.

Knobs
Select a column to control the Tempo, Swing or Metronome Gain.

Long Hold

Play, Stop, Record
Touch to control the active sequence. Play must be active to Record.

When you press Play, the selected sequence will play in a loop and queued clips will start playing.

PLAY AND CREATE SEQUENCES IN THE STEP EDITOR

Sequence: Pad
What you are currently editing. Turn the top knob to change which pad you are editing.

Measure:Beat
Playback clock.


Pad
Each small rectangle is a pad. White outlines show the selected pad. Filled pads will be triggered in that step. Violet pads are active steps for the selected pad.

Sequence Step
Touch or swipe to add a pad trigger.

Play Cursor
White rectangle moves with playback position.

Sequence Page
Push the layer button to change the page.

You can watch pad triggers get added here as you record MIDI notes from a connected controller.

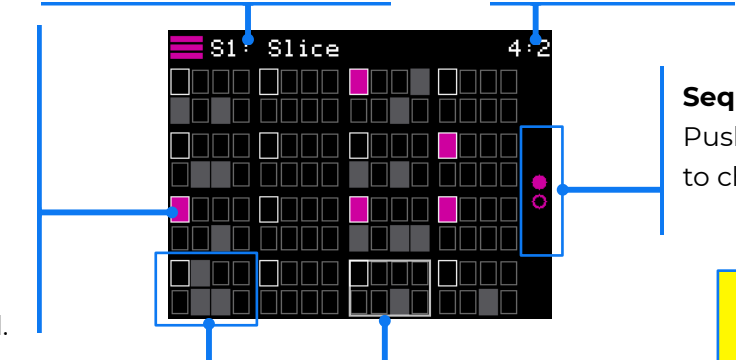

FIND OUT MORE



Full User Guide and More

Download the User Guide PDF to get more in depth information. Find links to more information about the product.

1010music.com/razzdocs



Firmware Updates and Community

Find firmware updates with new features and bug fixes for your nanobox | razzmatazz. Scroll down to the Product Downloads header where you will find updating instructions. Connect with other users.

forum.1010music.com



Contact Us

Are you loving your nanobox | razzmatazz? Have questions? You can contact us through our website.

1010music.com/contact-us



Social Media News

Look for how to videos, new product releases, firmware updates and contests on [YouTube](#), [Instagram](#) and [Facebook](#).



1010music.com/razzdocs

