


nanobox | tangerine Quick Start Guide

GET SET UP

1. Insert the microSD card. The card must be in the slot for tangerine to load. The card is spring-loaded. Push to eject when needed, but leave it in for now.
2. Connect the Line Out to your mixer, speakers or headphones.
3. Connect an optional MIDI controller to the MIDI IN jack. TRS Type A and B are supported.
4. Connect the USB power cable.
5. Finger drum on the Pads Home screen or the MIDI controller and you are ready to make some beats!

INTRODUCING NANOBOX | TANGERINE

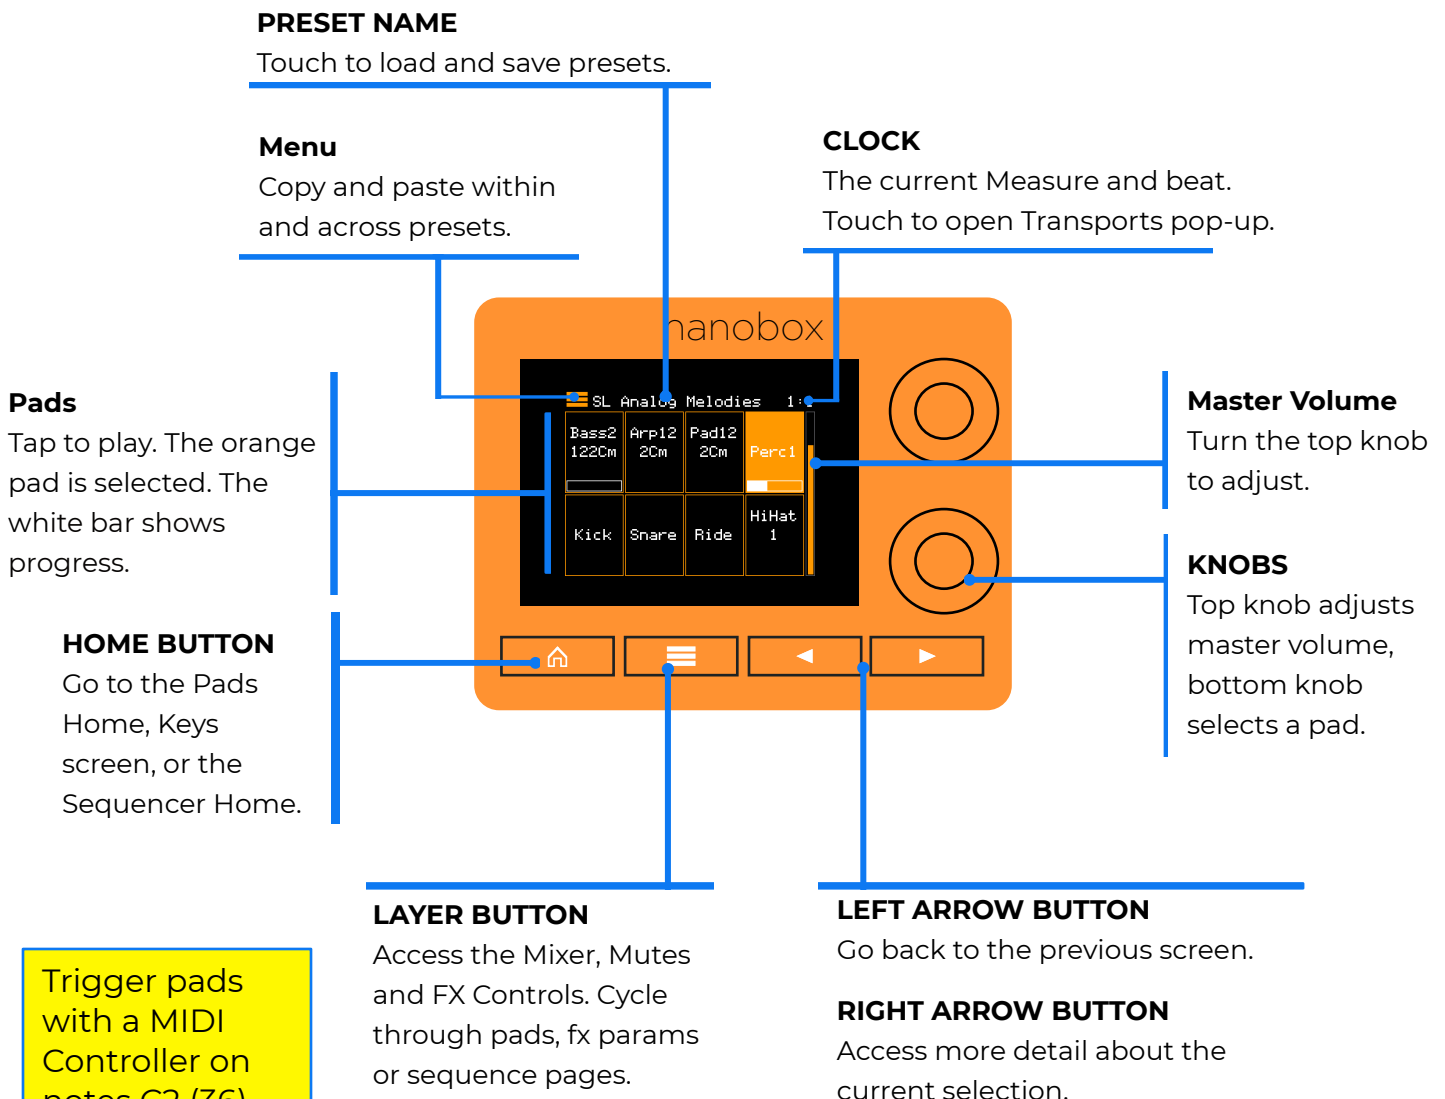

FEATURE MAP


Hold Home to access the Teleporter Menu.



Touch options on the Teleporter to jump to a screen.


Pads Home

Play pads and select a preset.

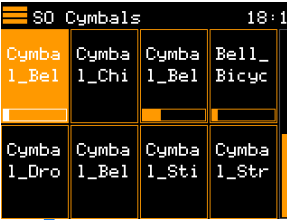


Macro Controls

Tune the pad settings.

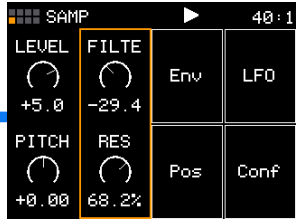


Waveform

Adjust end points and loop points.

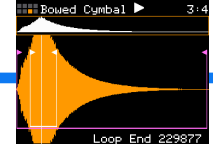

WAV Selector


Choose a sample file.

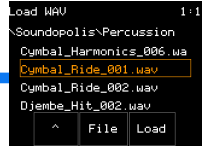

Touch


Mixer

Adjust level and pan.

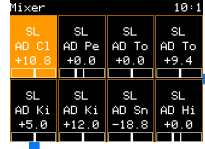




Mute

Silence a pad.

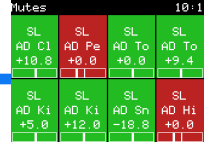


FX Screens

Control FX sends and adjust FX parameters.

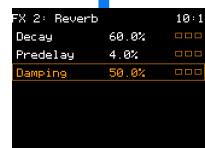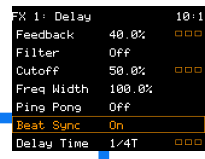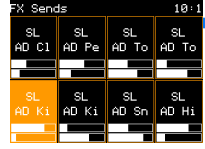


Parameter Pages

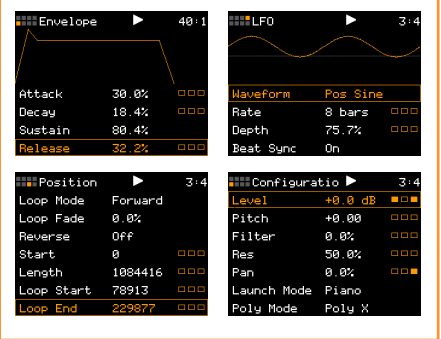


Keys Screen

Play the selected pad chromatically

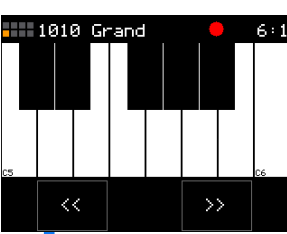


Keys Grid

Always play in key.

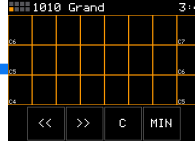


Sequencer Home

Select a sequence.

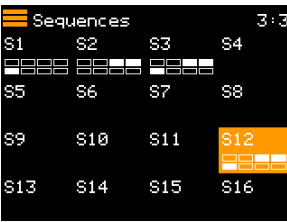

Sequence Settings

Adjust options for the selected sequence.

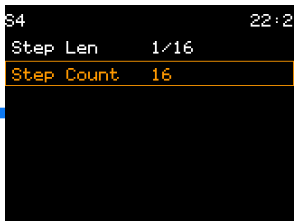

TUNE PAD SETTINGS ON THE MACRO SCREEN

Pad Mode Picker
Touch to select a pad mode.

Pad Grid
See which pad is selected.

Focus Ring
Touch a column to move the focus. Turn the hardware knobs to adjust settings in the focus ring.

Macro Controls
Adjust settings.

Parameter Pages
Touch to open a page.

Pad Trigger
Touch to trigger the pad to hear your changes. Flashes when pad is triggered.

Push the layer button to cycle through the pads in this preset.

PLAY SEQUENCES

Sequence Thumbnail
See which pads are used in the sequence.

Selected
Touch to select a sequence. The orange sequence is selected.

Selected Sequence
Confirm which sequence will play or record.

Recording Indicator
Play notes to add to selected sequence when active.

Knobs
Select a column to control the Tempo, Swing or Metronome Gain.

Play, Stop, Record
Touch to control the active sequence and armed clips. Play must be active to Record.

Hold

When you press Play, the selected sequence will play in a loop and queued clips will start playing.

EDIT PARAMETERS

Graph


See how parameter settings impact the LFO or Envelope.

Pad Trigger

Touch to hear the pad.

Parameters

Turn the top knob or touch to select a row. Turn the bottom knob to select a value.

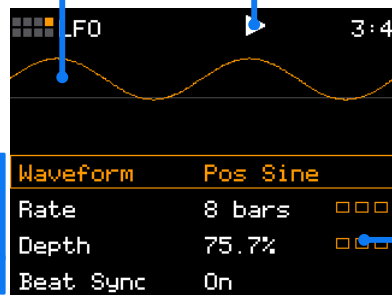

Modulation Slots

Push Right Arrow to edit Modulation settings.

Push the layer button to cycle through the pads in this preset.

Push Left Arrow from the Pads Home screen to access nanobox options, like brightness and MIDI Channels.

nanobox Config	0.0.48	2:1
Volume	73.5%	
Brightness	100.0%	
Compressor	On	
MIDI GlobIn	Omni	
MIDI CC In	None	
MIDI ProgChg	Off	
MIDI Rec	Off	

Parameters

Turn the top knob or touch to select a row. Turn the bottom knob to select a value.

FIND OUT MORE

Documentation, Firmware Updates and Community



Download the full User Guide PDF to get more in depth information. Find links to How To videos. Login and find firmware updates with new features and bug fixes for your nanobox | tangerine. Connect with other users.

forum.1010music.com



Contact Us



Are you loving your nanobox | tangerine? Have questions? You can contact us through our website.

1010music.com/contact-us



Social Media News

Find out about How To videos, new product releases, firmware updates and contests on



[YouTube](https://www.youtube.com), [Instagram](https://www.instagram.com) and [Facebook](https://www.facebook.com).